

| | | |
|----|--|------------------------|
| ES | Instrucción de montaje ¡Leer primero! | Barras de aluminio |
| EN | Assembly instructions Read first! | Aluminium bars |
| FR | Instruction de montage Lire en premier! | Barres d'aluminium |
| DE | Montageanleitung Zuerst lesen! | Aluminiumdachträger |
| PT | Instruções de montagem Ler primeiro! | Barras d'alumínio |
| IT | Istruzioni di montaggio Leggere per primo! | Barre di alluminio |
| NL | Montagehandleiding Eerst lezen! | Aluminium dakdragers |
| PL | Instrukcja montażu Najpierw przeczytaj! | Belki aluminiowe |
| CZ | Montážní návod Čtěte pozorně! | Hliníková sada tyčí |
| HU | Szerelési Utasítás Először olvassd el! | Alumínium rudak |
| HR | Detaljne upute Prvo procitati! | Bare din aluminiu |
| RO | Instructiuni de montaj Intai cititi! | Aluminijske šipke |
| RU | Инструкции по монтажу Сначала прочитайте! | Алюминиевые поперечины |
| GR | Διαβάστε προσεκτικά τις Οδηγίες Συναρμολόγησης! | Μπάρες Αλουμινίου |
| TR | Öncelikle montaj: Talimatlarını okuyunuz! | Alüminyum barlar |
| SI | Navodila za sestavljanje Preberite! | Aluminijske prečke |

924-09XAF2

Lv7 2018-r9


Modelo-model:

CRUZ Alu Cargo AF2


Lote-Lot-Lot-Lot:



Peso-Weight-Poids-Gewicht:

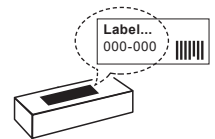

Max. 100 kg / 220 lbs



CEE - EEC type approval:



26 R- 04 3022






CITY CRASH (M)





CRUZBER SAU
ES-A14018311
P.I. Las Salinas II
14960 - Rute - Spain
www.cruz-products.com



1.



| | | | | |
|----|---|----|---|---|
| ES | Contenido embalaje: ¡Verificar! | x1 | | x1 |
| EN | Package content: Check! | |  |  |
| FR | Contenu d'emballage: Vérifier! | | | |
| DE | Packungsinhalt: Überprüfen! | x2 | | |
| PT | Contéudo embalagem: Verificar! | | | |
| IT | Contenuto della confezione: Controllare! | |  | |
| NL | Pakket inhoud: Controleer! | | | |
| PL | Zawartość opakowania: sprawdź! | | | |
| CZ | Obsah balení: Zkontrolujte! | | | |
| HU | Csomag tartalma: Ellenőrizd! | | | |
| HR | Sadržaj paketa: Provjeri! | | | |
| RO | Pachetul contine: Verificati! | | | |
| RU | Содержание упаковки: Проверьте! | | | |
| GR | Ελέγξτε το περιεχόμενο: του πακέτου! | | | |
| TR | Paket içeriğini: Control ediniz! | | | |
| SI | Vsebina paketa: Preverite! | | | |

| Código Code |  |  |  |  | Lote Lot |
|-------------|---|---|---|---|----------|
| 924-071 | AF 118 (824-062) | 118 cm / 46" | 2x (749-066) 1x (749-053) | 3,22 kg / 7,10 lbs | 01/18 |
| 924-090 | AF 128 (824-064) | 128 cm / 50" | 2x (749-067) 1x (749-053) | 3,74 kg / 8,25 lbs | 03/15 |
| 924-091 | AF 138 (824-069) | 138 cm / 54" | 2x (749-069) 1x (749-053) | 3,93 kg / 8,66 lbs | 03/15 |
| 924-092 | AF 148 (824-074) | 148 cm / 58" | 2x (749-070) 1x (749-053) | 4,11 kg / 9,06 lbs | 03/15 |
| 924-093 | AF 158 (824-079) | 158 cm / 62" | 2x (749-071) 1x (749-053) | 4,30 kg / 9,48 lbs | 03/15 |
| 924-094 | AF 175 (824-084) | 175 cm / 69" | 2x (749-073) 1x (749-053) | 5,00 kg / 11,02 lbs | 03/15 |

2.




Importante!
Important!
Important!
Wichtig!

- ES Estas barras tienen que usarse con Kits de fijación CRUZ!
- EN Bars must be used with CRUZ fixation Kits!
- FR Les barres devront être utilisées avec les Kits de fixation CRUZ!
- DE Die Dachträger nur mit CRUZ Stützfuß-Kits befestigen!
- PT As barras devem ser utilizadas com os Kits de fixação CRUZ!
- IT Questa bare deve essere utilizzato solo con il kit di fissaggio CRUZ!
- NL Dakdragers moeten worden gebruikt in combinatie met de bevestigingssets van CRUZ!




- PL Belki muszą być stosowane z elementami mocującymi firmy CRUZ!
- CZ Tento nosič musí být používán s fixačním kitem CRUZ!
- HU A rudakat csak CRUZ rögzítő készlettel szabad használni!
- HR Šipke moraju biti korištene sa CRUZ kitovima za montažu!
- RO Barele trebuie utilizate cu Kit-uri de fixare CRUZ!
- RU Поперечины должны быть использованы со специальным крепежным комплектом CRUZ!
- GR Το αξεσουάρ αυτό θα πρέπει να χρησιμοποιείται αποκλειστικά στα συστήματα μπαρών της CRUZ!
- TR Bu barlar mutlak CRUZ montaj kiti!
- SI Prečke je potrebno uporabiti s CRUZ kiti za pričvrščanje

1

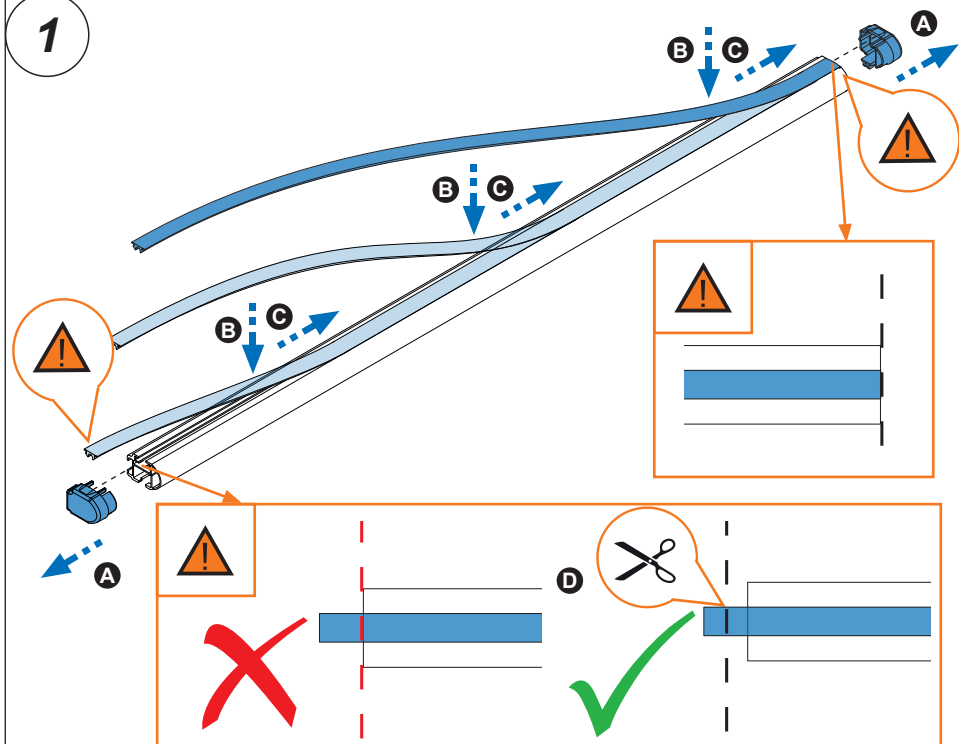

3. 

2

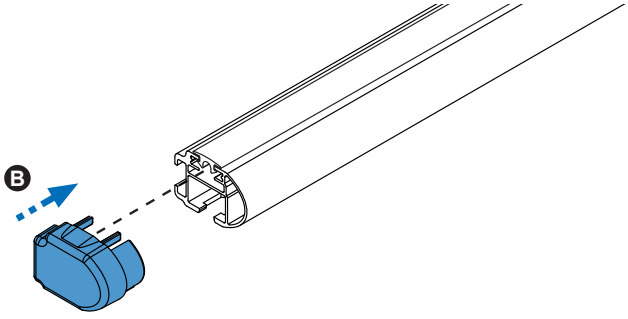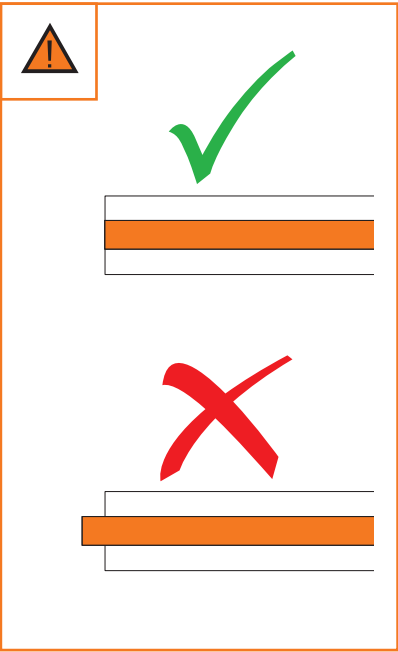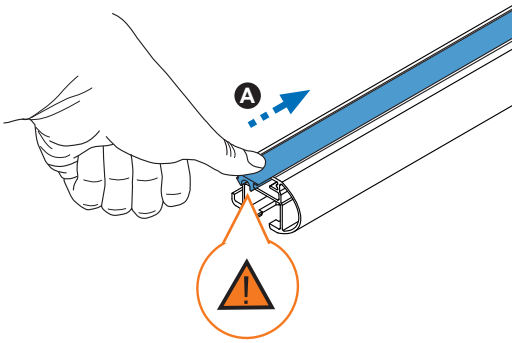

3

